

1.) Installing Nextcloudpi


- get the NCP Image here:

https://ownyourbits.com/downloads/NextCloudPi_RPi_03-02-22/NextCloudPi_RPi_03-02-22.tar.bz2

- for Windows: download and install balenaEtcher

<https://www.balena.io/etcher/>

- in settings: activate "Unsafe mode", so it also detects your hard drives

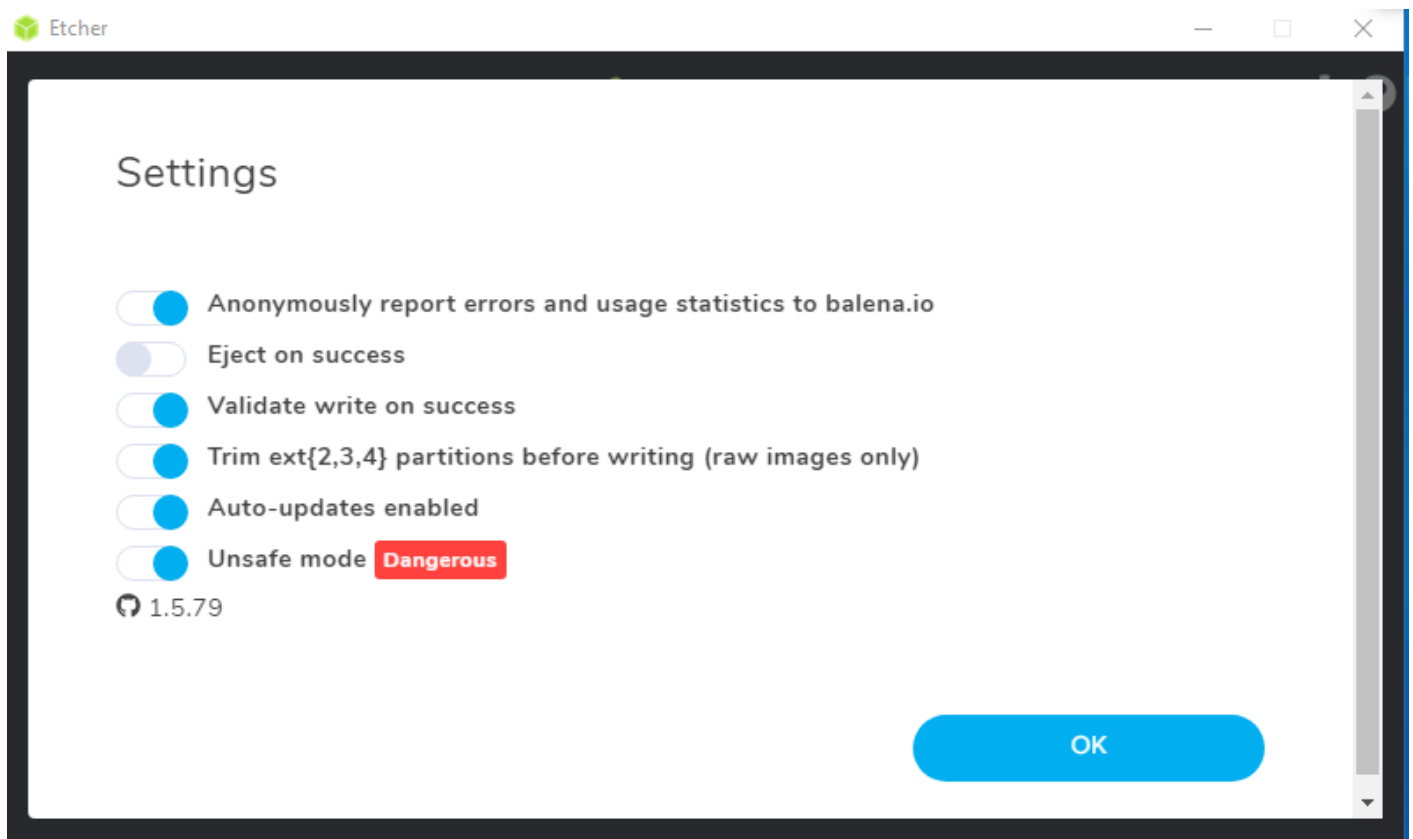

- now connect the SSD to your Raspberry

- don't forget to connect the pi to your network (for this method i postulate a cable connection)

- let the pi boot up; this may take some minutes

For the next step i will redirect to the official nextcloudpi guide until my own documentation will be ready

<https://docs.nextcloudpi.com/en/how-to-access-nextcloudpi/>

If your Raspberry will not boot from your SSD drive, maybe it still needs some files changed.

- put back the SSD back into your computer
- get the needed files for ssd boot from here:

<https://github.com/raspberrypi/firmware/archive/master.zip>

- extract the files somewhere on your computer
- go into the boot folder inside the folder you just extracted
- copy over all the files that end in .elf or .dat to the boot volume of your USB drive (replacing the same-named files that already exist there)

 fixup.dat	24.02.2021 15:50	DAT-Datei	8 KB
 fixup_cd.dat	24.02.2021 15:50	DAT-Datei	4 KB
 fixup_db.dat	24.02.2021 15:50	DAT-Datei	11 KB
 fixup_x.dat	24.02.2021 15:50	DAT-Datei	11 KB
 fixup4.dat	24.02.2021 15:50	DAT-Datei	6 KB
 fixup4cd.dat	24.02.2021 15:50	DAT-Datei	4 KB
 fixup4db.dat	24.02.2021 15:50	DAT-Datei	9 KB
 fixup4x.dat	24.02.2021 15:50	DAT-Datei	9 KB
 kernel.img	24.02.2021 15:50	Datenträgerimage...	5.842 KB
 kernel7.img	24.02.2021 15:50	Datenträgerimage...	6.173 KB
 kernel7l.img	24.02.2021 15:50	Datenträgerimage...	6.538 KB
 kernel8.img	24.02.2021 15:50	Datenträgerimage...	7.577 KB
 LICENCE.broadcom	24.02.2021 15:50	BROADCOM-Datei	2 KB
 start.elf	24.02.2021 15:50	ELF-Datei	2.884 KB
 start_cd.elf	24.02.2021 15:50	ELF-Datei	775 KB
 start_db.elf	24.02.2021 15:50	ELF-Datei	4.682 KB
 start_x.elf	24.02.2021 15:50	ELF-Datei	3.618 KB
 start4.elf	24.02.2021 15:50	ELF-Datei	2.177 KB
 start4cd.elf	24.02.2021 15:50	ELF-Datei	775 KB
 start4db.elf	24.02.2021 15:50	ELF-Datei	3.636 KB
 start4x.elf	24.02.2021 15:50	ELF-Datei	2.912 KB

- now connect the SSD to your Raspberry
- don't forget to connect the pi to your network (for this method i postulate a cable connetion)
- let the pi boot up; this may take some minutes

For the next step i will redirect to the offical nextcloudpi guide until my own documentation will be ready

<https://docs.nextcloudpi.com/en/how-to-access-nextcloudpi/>

Revision #14

Created 5 March 2021 23:32:40 by Jan

Updated 7 March 2022 18:52:35 by Jan